


Thank you for choosing CYmodel Global: www.cymodel.com
Australia: www.austars-model.com

Italia: www.biellaexpress.com

Ju87 stuka

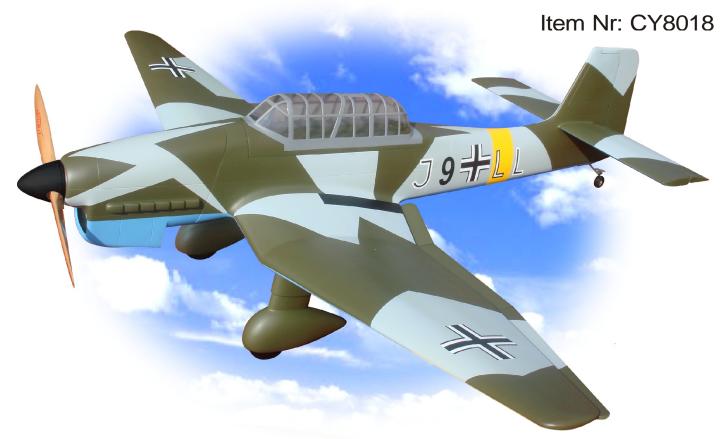

Instruction Manual

Before commencing assembly, please read these instructions thoroughly.

ALMOST - READY - TO - FLY



Warning! SAFETY PRECAUTIONS

This radio control model is not a toy!

- First-time builders should seek advice from people having building experience in order to assemble the model correctly and to produce its performance to full extent.
- Assemble this kit only in places out of children's reach!
- Take enough safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation!
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.
- •Could cause serious injury or even death


SPECIFICATION

Wing Span: 2540mm (100in) Wing Area: 94.5dm² (1463.5sq.in) Total Length: 2000 mm (78.7 in)


Engine: 80cc gas engine

Radio: 5-6 channels, 10 servos

REQUIRED FOR OPERATION (Purchase separately)

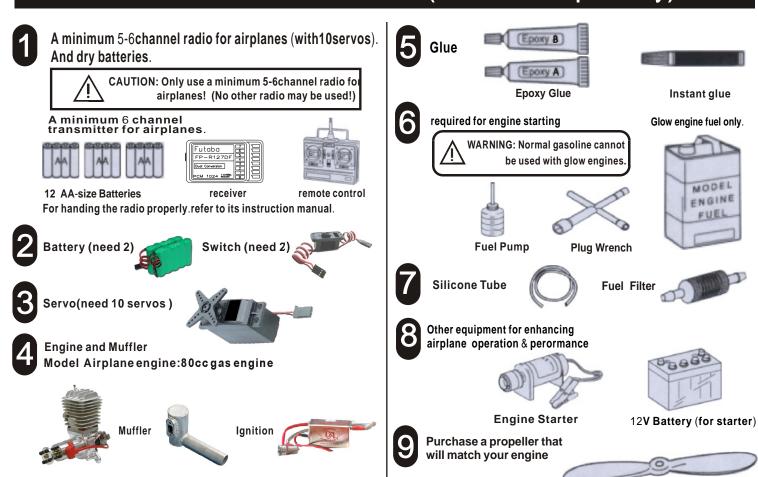

TOOLS REQUIRED (Purchase separately)

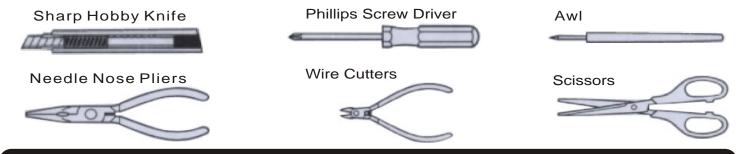

BEFORE YOU BEGIN

- Read through the manual before you begin, so you will have an overall idea of what to do.
- Check all parts .if you find any defective or missing parts .contact your local dealer.
- Symbols used throughout this instruction manual, comprise.



Apply epoxy glue.

Apply instant glue

(CA glue, super glue).



Drill holes with the specified Diameter(here:2mm)



 
Must be purchased separately!



Ensure smooth non-binding movement while assembling.



Pay close attention here!





Assemble left and right Sides the same way.




Cut off shaded portion.




Cut off excess.




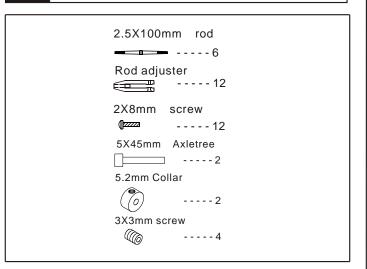


3 Install the aileron and flap

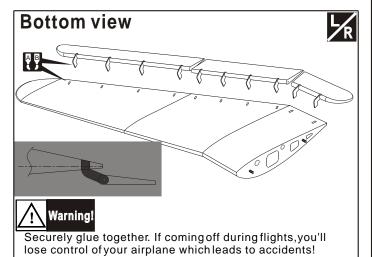


1 Install the flap

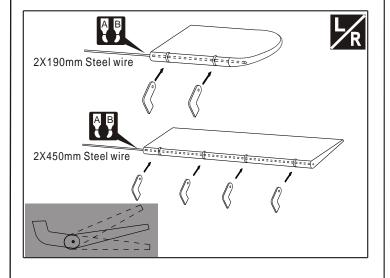


4 Install the servo

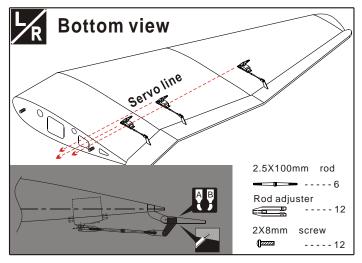


2 Install the aileron

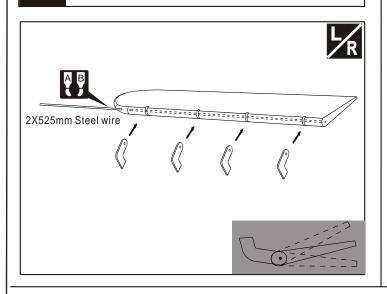


5 Install the main landing gear

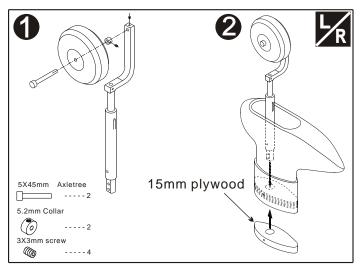




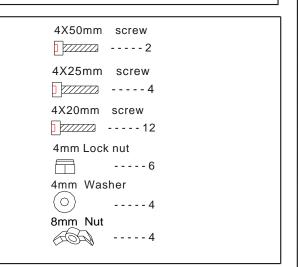


8

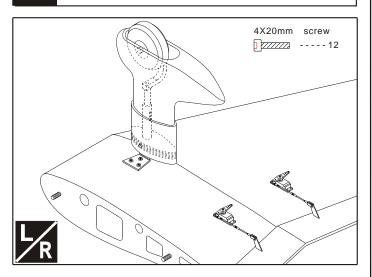


6 Install the main landing gear

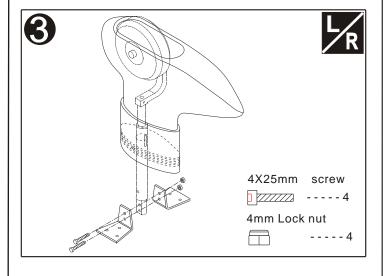


9 Main wing

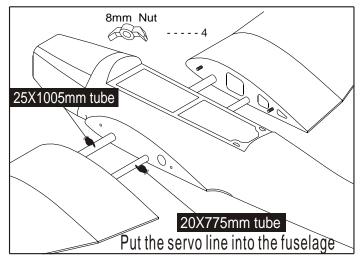


7 Install the main landing gear

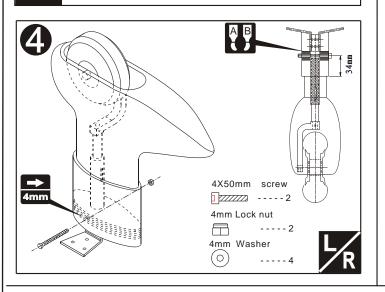


10 Main wing

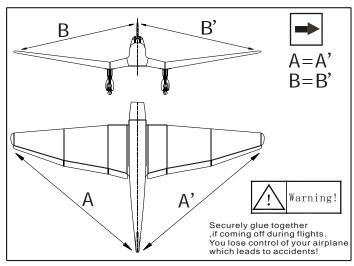




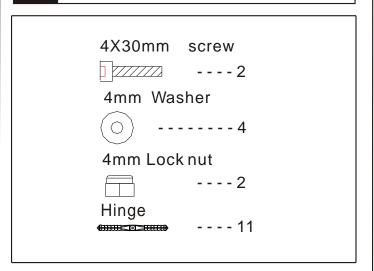


13 Install the elevator

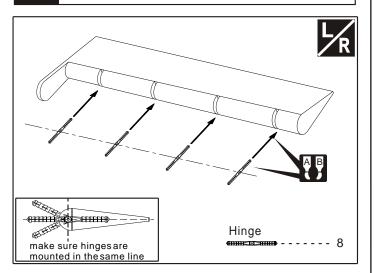


11 Install the rudder

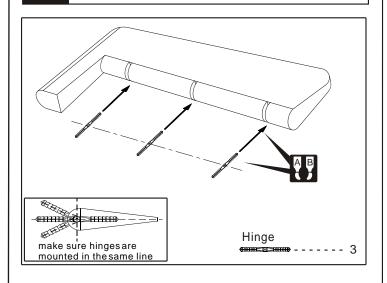


14 Install the elevator

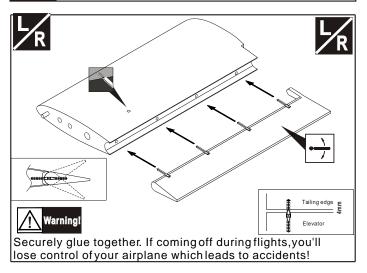


12 Install the rudder

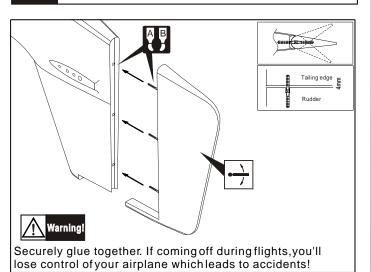


15

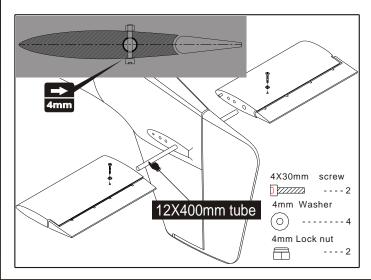




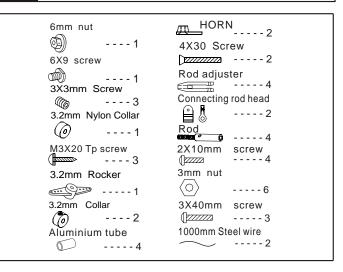


18 Install the tail wheel

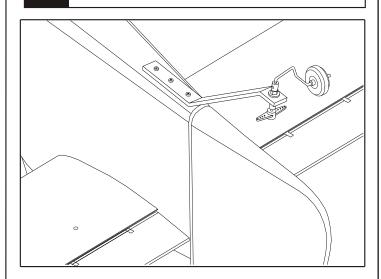


16 Main wing&Horizontal/Vertical tail

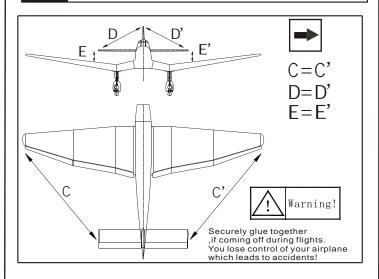


19 Install the rudder servo

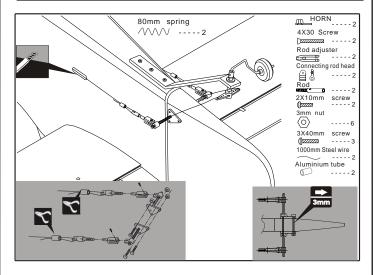


17 Install the tail wheel

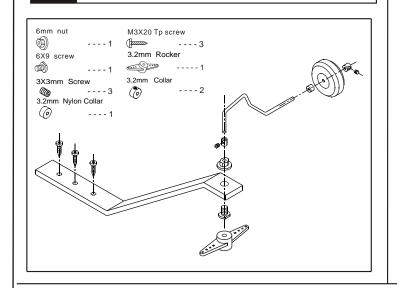


20 Install the rudder servo

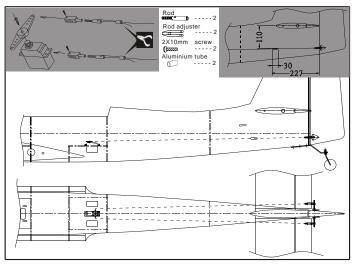




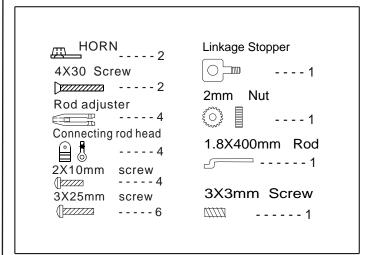


23 Install the elevator servo

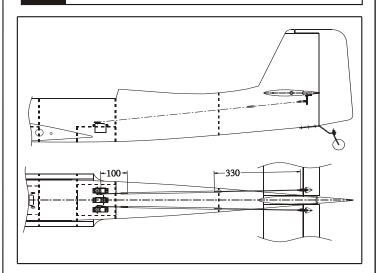


21 Install the rod for elevator

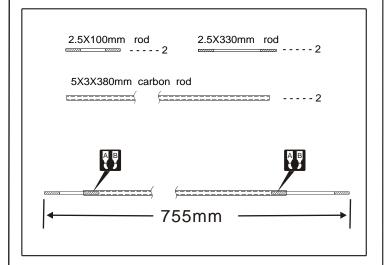


24 Installing the engine (80cc)

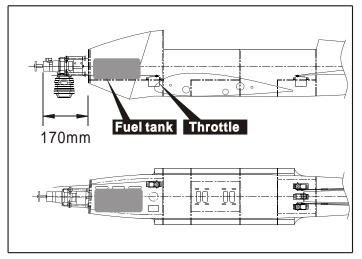


22 Install the elevator servo

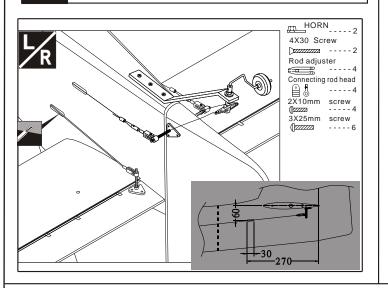


25 Install the throttle servo

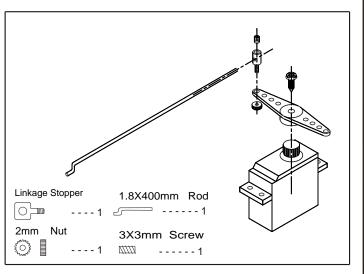




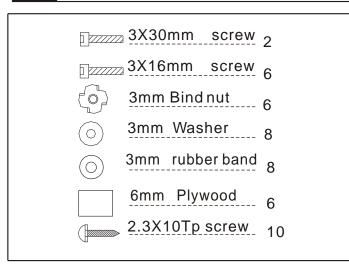


28 Install the thr cowling

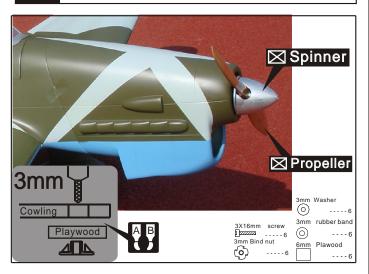


26 Assembly of the full tank

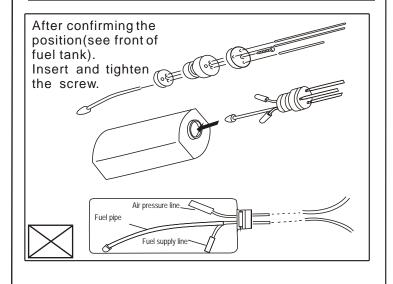


29 Install the canopy

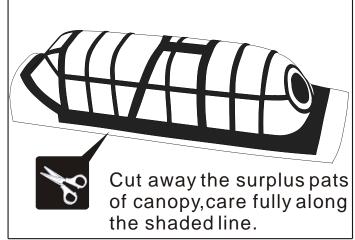

27 Radio Equipment

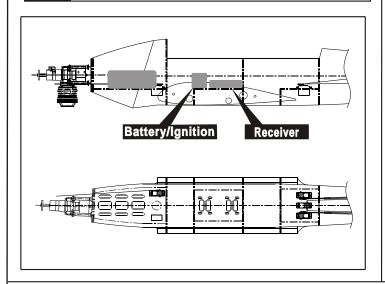

30 Install the canopy

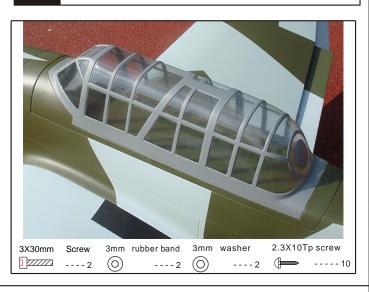

31 Adjustment.

Adjust the travel of each control surface to the values in the diagrams.
These values fit general flight capabilities.
Readjust according to your needs and flight level.


AILERON

Side view


Flap

1 45°

33 Adjustment

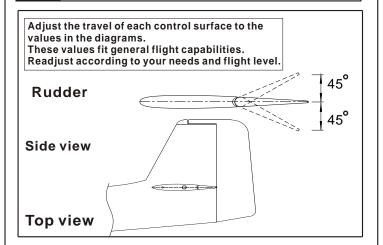

32 Adjustment.

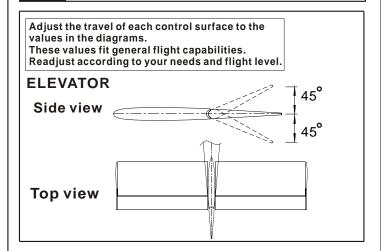

34 Adjustment.

