

Thank you for choosing CYmodel
Global : www.cymodel.com
Australia : www.austars-model.com
Italia : www.biellaexpress.com

Siai Marchetti SF-260



Instruction Manual

Before commencing assembly, please read these instructions thoroughly.



Warning!

SAFETY PRECAUTIONS

This radio control model is not a toy!

First-time builders should seek advice from people having building experience in order to assemble the model correctly and to produce its performance to full extent.

Assemble this kit only in places out of children's reach!

Take enough safety precautions prior to operating this model.

You are responsible for this model's assembly and safe operation!

Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.

Could cause serious injury or even death

SPECIFICATION

Wing span..... 2286 mm (90 in)
Wing area.....62.8 dm² (974 sq.in)
Empty weight.....7.3 kg
Total length.....1890 mm (70.5 in)
Engine.....35-50 cc gas engine
Radio.....6 channels 8 servos

Item Nr: Cy8124B

REQUIRED FOR OPERATION (Purchase separately)

- 1** A minimum 6 channel radio for airplanes (with 8 servos). And dry batteries.



CAUTION: Only use a minimum 6 channel radio for airplanes! (No other radio may be used!)

A minimum 6 channel transmitter for airplanes.



12 AA-size Batteries

 


For handing the radio properly, refer to its instruction manual.

- 2** Engine and Muffler
Model Airplane engine
35-50 cc gas engine



Muffler

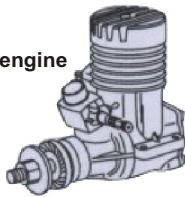

Glow plug

- 3** Propeller splinner

Purchase a propeller that will match your engine



- 4** Silicone Tube Fuel Filter engine fuel

 
- 5** required for engine starting




WARNING: Normal gasoline cannot be used with glow engines.



Fuel Pump

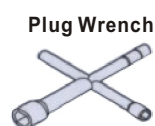


Plug Wrench

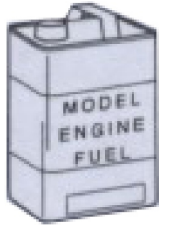 


- 6** Glue Instant glue Epoxy Glue

 - 7** Other equipment for enhancing airplane operation & peromance

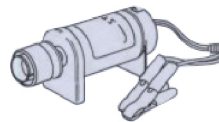

Engine Starter

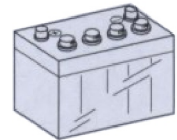 

12V Battery (for starter)

TOOLS REQUIRED (Purchase separately)

Sharp Hobby Knife



 
Phillips Screw Driver



Awl




Needle Nose Pliers



Wire Cutters



 Scissors

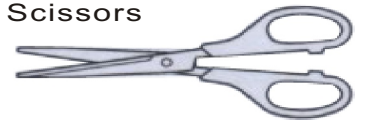

BEFORE YOU BEGIN

1. Read through the manual before you begin ,so you will have an overall idea of what to do.
2. Check all parts .if you find any defective or missing parts .contact your local deater.
3. Symbols used throughout this instruction manual,comprise.



Apply epoxy glue.



Drill holes with the specified Diameter(here:2mm)



Must be purchased separately!



Apply instant glue (CA glue,super glue).



Ensure smooth non-binding movement while assembling.



Pay close attention here!



Assemble left and right Sides the same way.



Cut off shaded portion.



Cut off excess.



 
Warning!

Do not overlook this symbol.



Accessory list for this page.


Hinge



---10


3

 Install the lamp-chimney

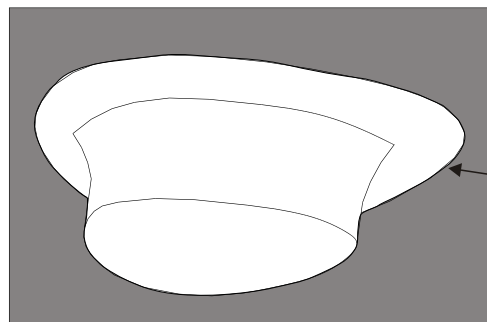


1

 Epoxy pin hinges to aileron steadily

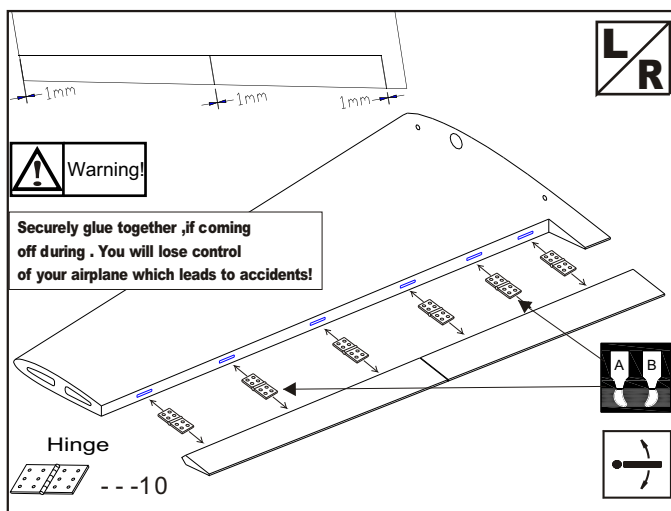


4

 Install the lamp-chimney

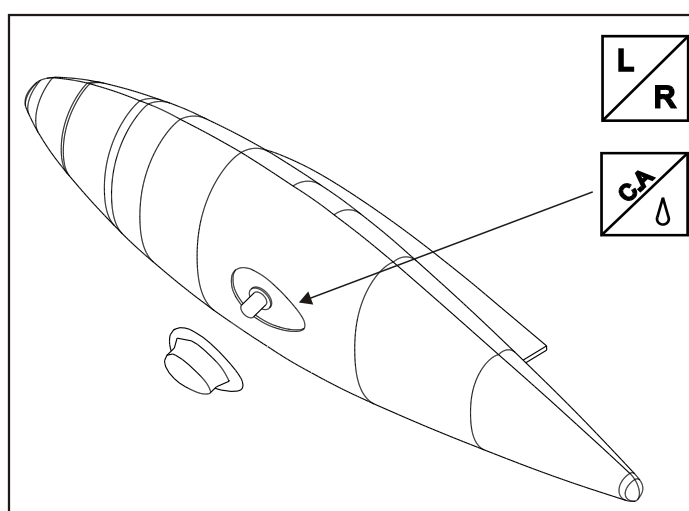


2

  Install the lamp-chimney

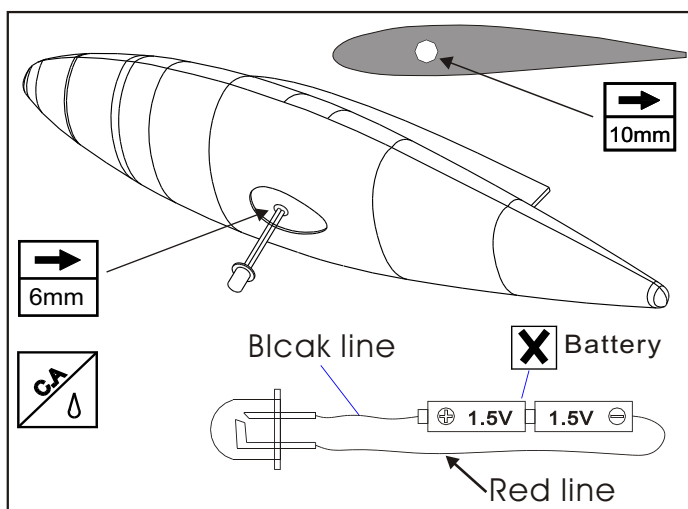

 
 
 

 
 


 
 
 
 

 


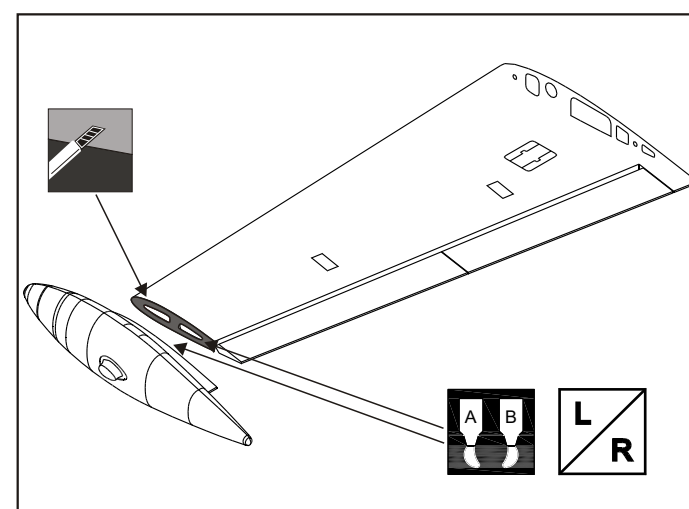



5

  Install the lamp-chimney



 


 
 

 
 
 
Accessory list for this page.

M4X35mm Screw 	M4X20mm screw 	3X16mm Tp screw 
4	2	8
Rod adjuster 	M4X20mm screw 	M3X10mm Screw 
8	4	4
Horn 	M4 Lock Nut 	700 mm steel wire 
4	4	2
2X10mm Screw 	5.2mm Collar 	Rod 
8	2	2
Connecting rod head 	3X3mm screw 	3mm Nut 
4	2	2
2.5X85mm Rod 	4X4mm screw 	4x4mm Screw 
4	4	2
M3X25mm Screw 	M3X20mm Screw 	
8	4	

8


Install the main landing gear

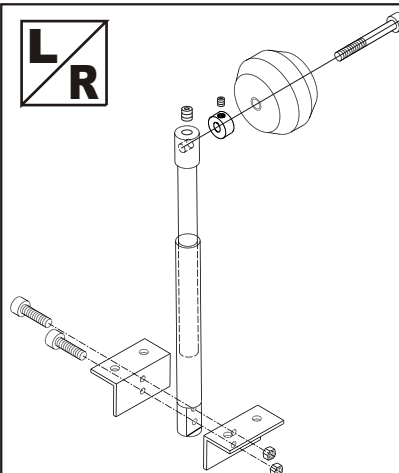

M4X20mm screw 	2
M4X20mm screw 	4
M4 Lock Nut 	4
5.2mm Collar 	2
3X3mm screw 	2
4X4mm screw 	4

6

 Install the aileron

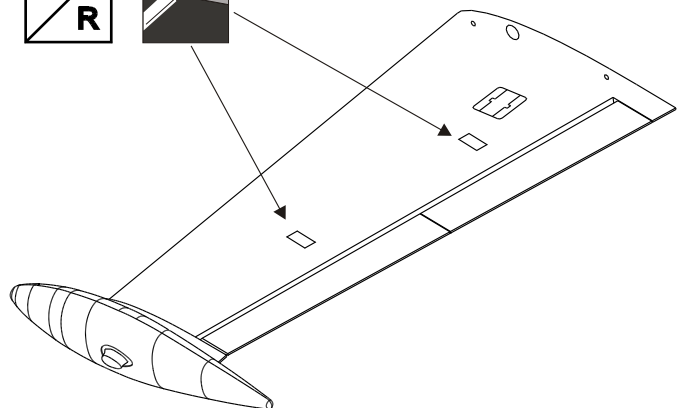


9

Assemble the landing gear to the wing with screw

  
3X16mm Tp screw

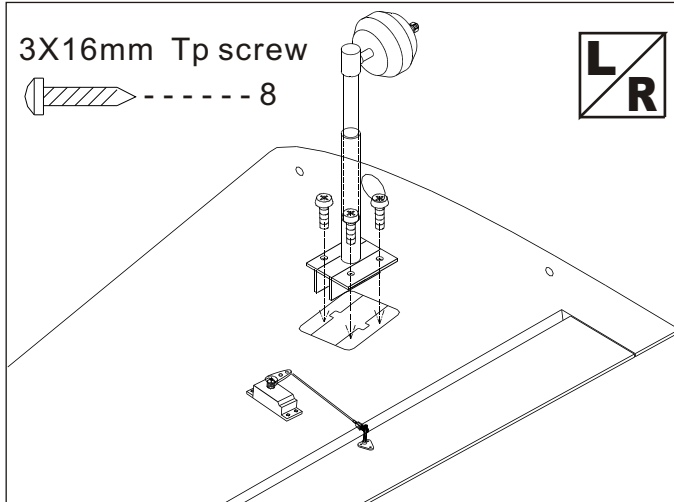


 
 

 
 
8



7

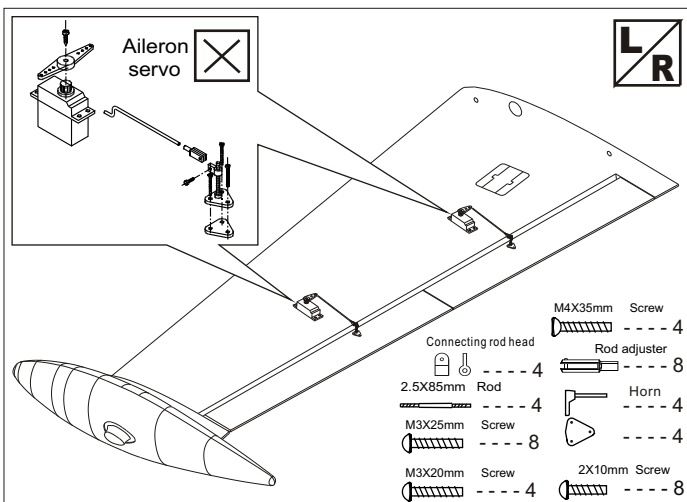 
Install the aileron servo

 
 

 



M4X35mm Screw 	4
Rod adjuster 	8
Connecting rod head 	4
2.5X85mm Rod 	4
M3X25mm Screw 	8
M3X20mm Screw 	4
Horn 	4
2X10mm Screw 	8

10

Assemble the front-wheel drive

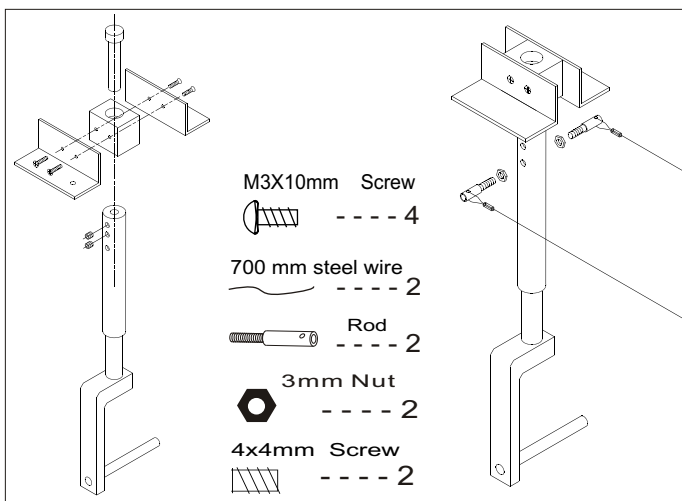

M3X10mm Screw 	4
700 mm steel wire 	2
Rod 	2
3mm Nut 	2
4x4mm Screw 	2



Accessory list for this page.

3X20mm Tp screw

----- 4

5 mm Washer

----- 1

M4 Lock Nut

----- 1

Pin hinges

----- 3

Nylon nut

 
----- 4

Hinge

----- 6


13

Assemble the wings to the fuselage

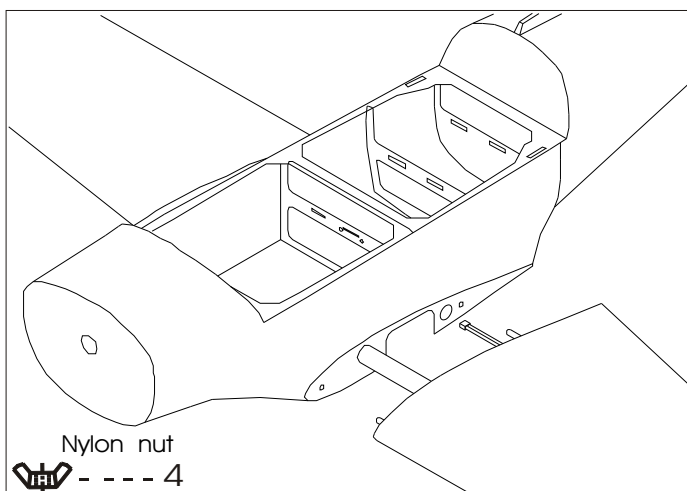


11

 Assemble the front-wheel drive to the fuselage with screw

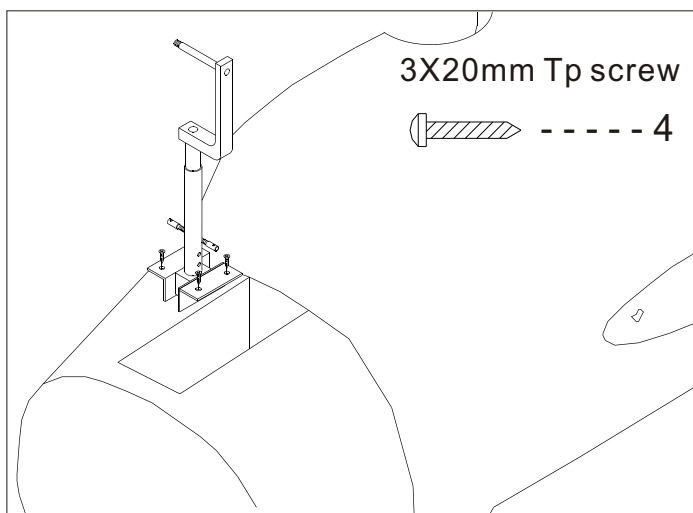


14

 Epoxy the horizontal tail

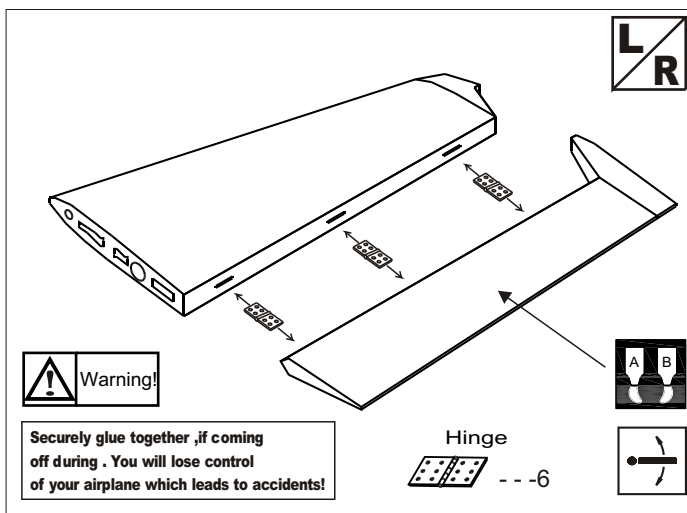


12

 Assemble the front-wheel drive

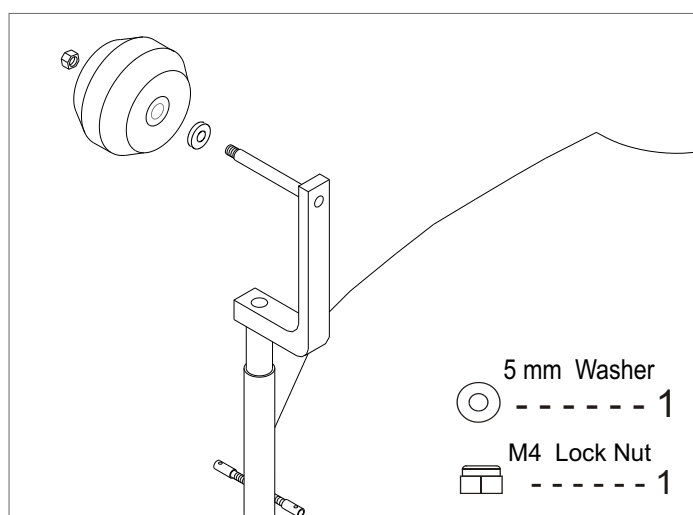

15

 Install the rudder

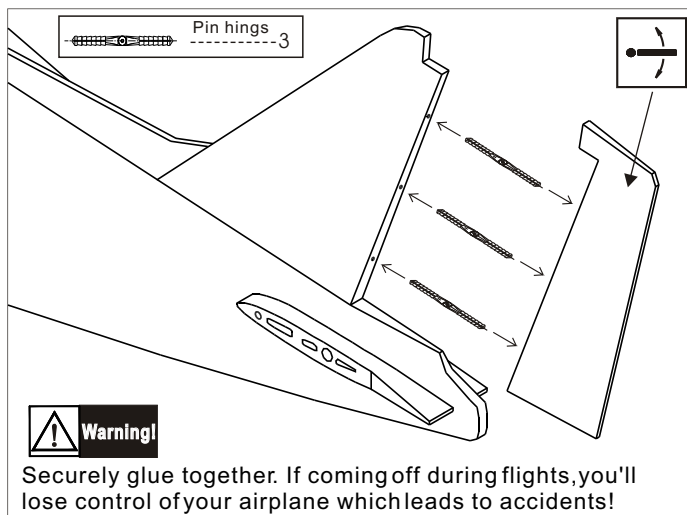




Accessory list for this page.

Horn	4	Rod adjuster	8
		M2X8mm cap screw	6
		M4X35mm screw	1
Aluminum tube (3x6mm)	10	M2x8mm cap screw	2
Steel wire	4	Copper joiner	6
M3x20mm Screw	6	4x35mm Screw	2
Connecting rod head	4	3x25mm Screw	3
Fiberglass tube	2	3mm Nut	3
Elevator rod	2		

18

 Secure the servo. Install the nylon control horn and connect the linkage

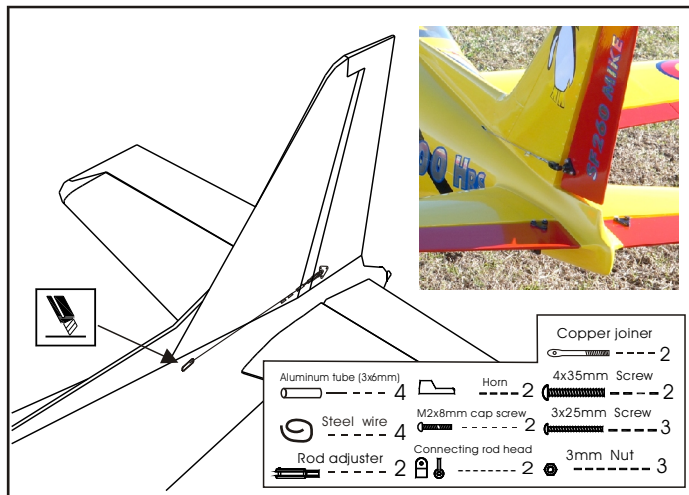


16

Assembly of the stabilizer



 B' = B
C' = C
D' = D

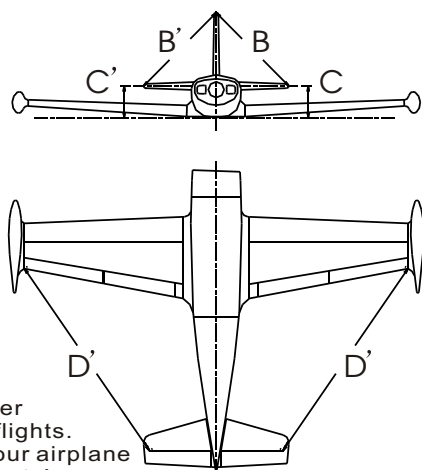


Warning!

Securely glue together, if coming off during flights. You lose control of your airplane which leads to accidents!


19

 Assemble the servo to the fuselage

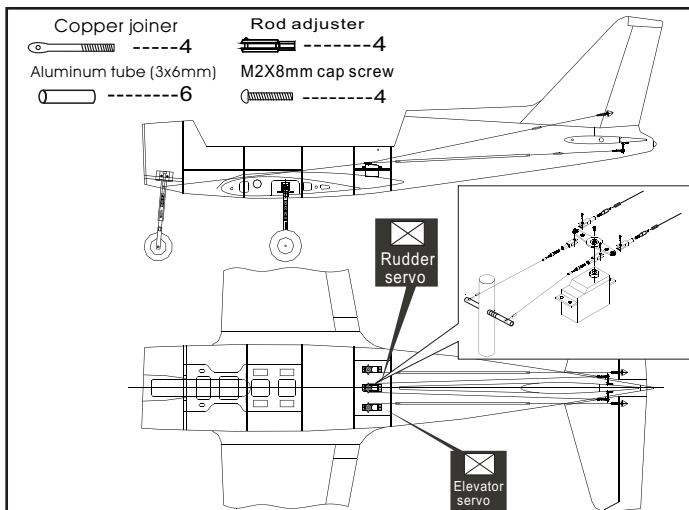


17

 Install the nylon control horn and connect the linkage

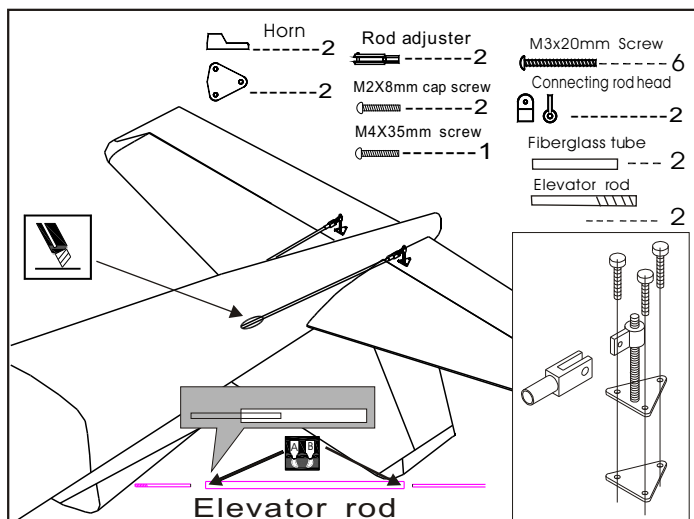

20

 
Assembly of the fuel tank

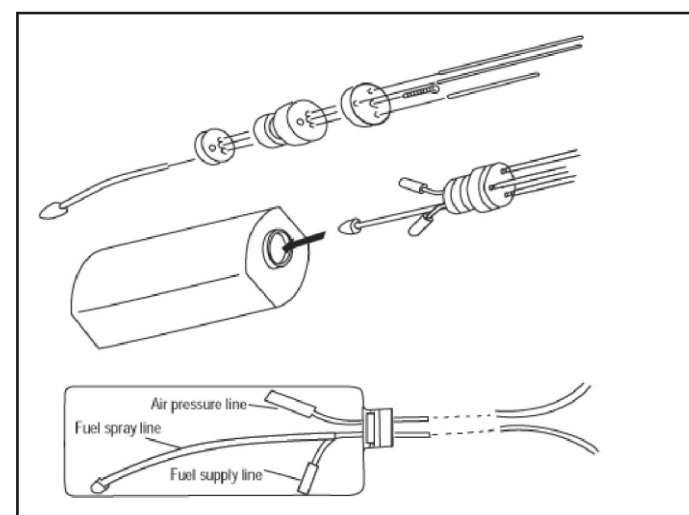




Accessory list for this page.

 
1.8x450mm Throttle rod




Nut (2mm)

 


Linkage Stopper

 


Set screw (3x4mm)

 


M3X16mm Cap Screw

 

Washer

 


Rubber gasket

 


23

 
Assemble the cowling to fuselage with screw

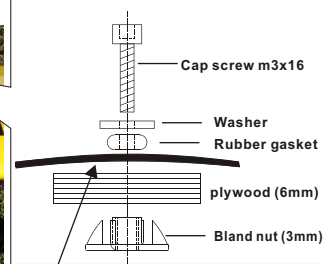

M3X16mm Cap Screw

 

Washer


 


Rubber gasket




21

  Assemble the engine

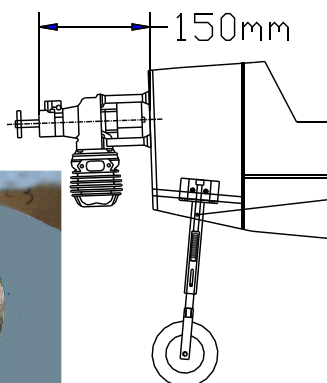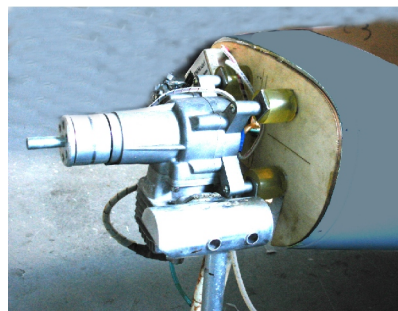

24

 
Trim the surplus shaded portion away from the canopy

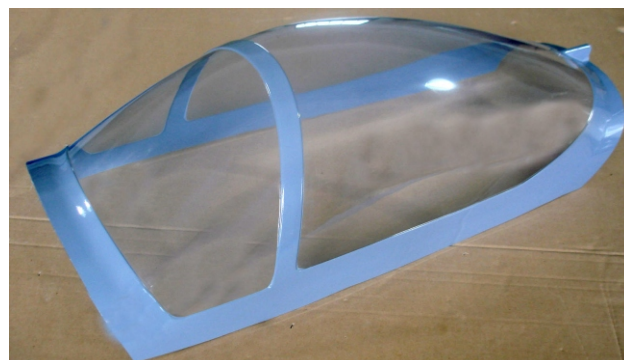


22

Mount the receiver and battery in the fuselage

 
1.8x450mm Throttle rod




Nut (2mm)

 

Linkage Stopper

 


Set screw (3x4mm)

 

(Battery)
(Receiver)



 Throttle servo

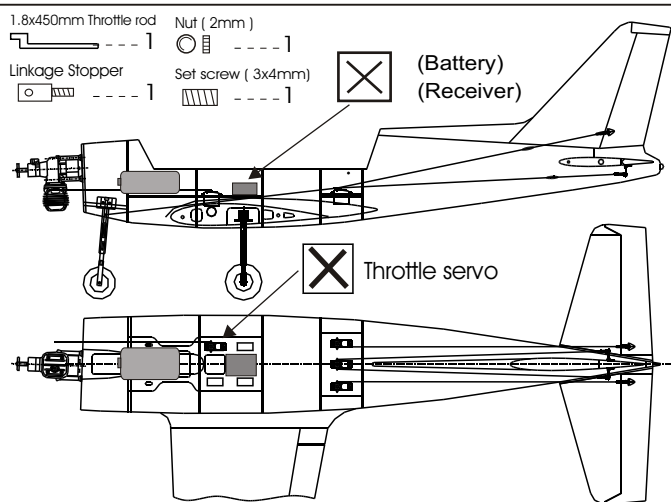


25


Assemble the canopy to the fuselage with TP screws



 
M3X16mm Cap Screw



Washer

 

Rubber gasket

 




Accessory list for this page.

If you choose an air retractable landing gear, the installing method is as steps 26 to 30.


28

 Epoxy the wheel wells to the holes

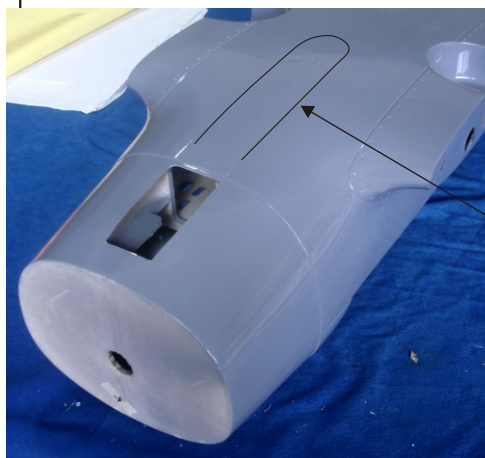


26

 Epoxy the wheel wells to the holes

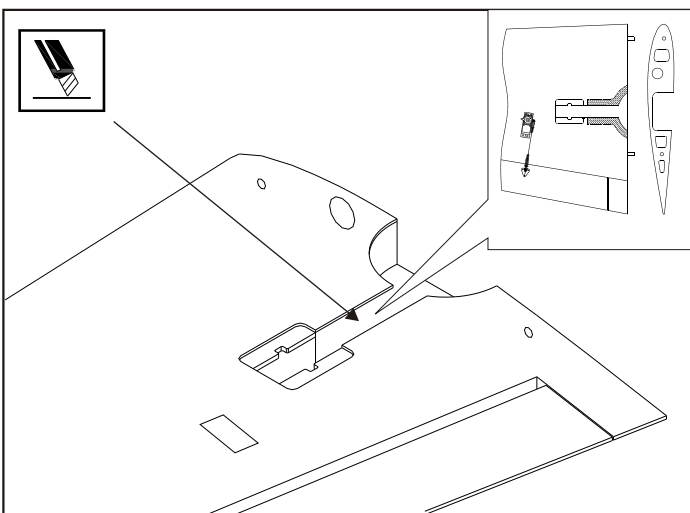

29

 Assemble the front-wheel drive

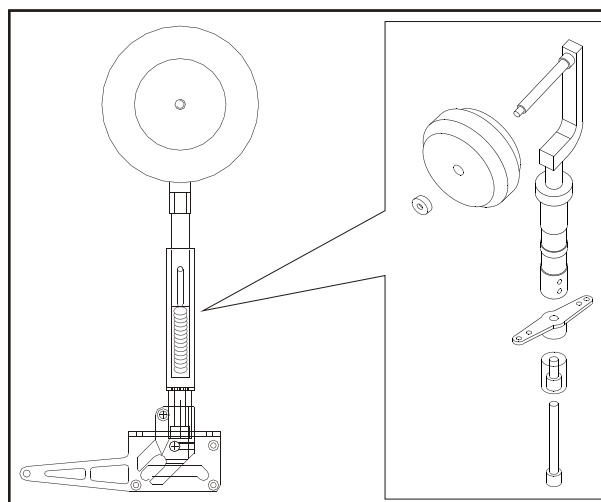

27

Assemble of the landing gear



5X45mm Axletree

----- 2

3X20mm Tp screw

----- 8

5.2mm Collar

----- 2

3X3mm screw

 
----- 2

4X4mm screw

----- 2

30


Three wheel retract system

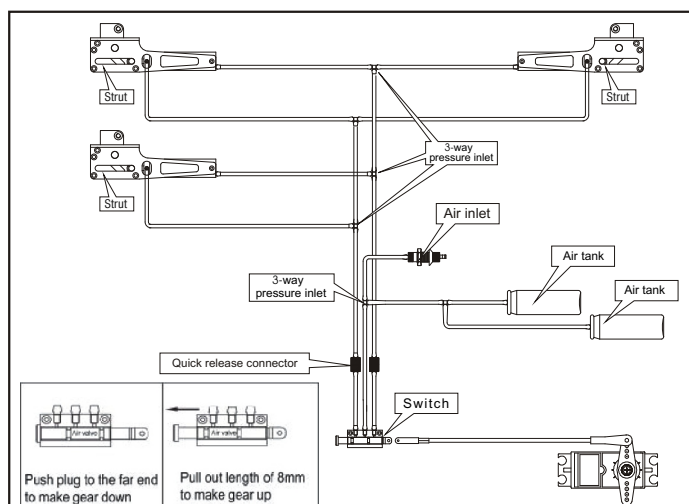

31 Adjustment.


Adjust the travel of each control surface to the values in the diagrams.
These values fit general flight capabilities.
Readjust according to your needs and flight level.

 AILERON

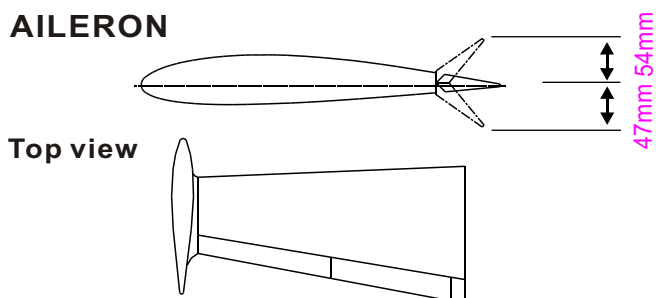


33 Adjustment.

 Adjust the travel of each control surface to the values in the diagrams.
These values fit general flight capabilities.
Readjust according to your needs and flight level.

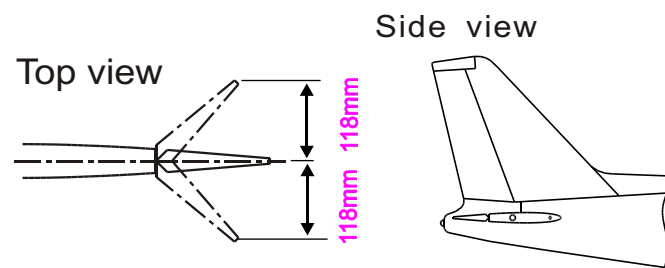


32 Adjustment.

 Adjust the travel of each control surface to the values in the diagrams.
These values fit general flight capabilities.
Readjust according to your needs and flight level.

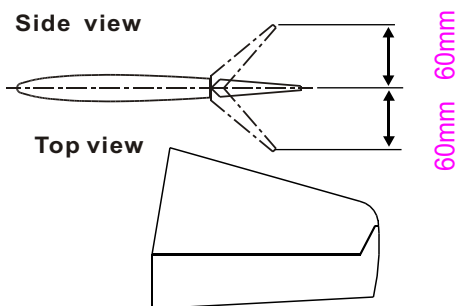

34 Centre of Gravity.

 Never fly before checking the Cg' s required position.
In order to obtain the CG specified ,reposition the receiver and battery.

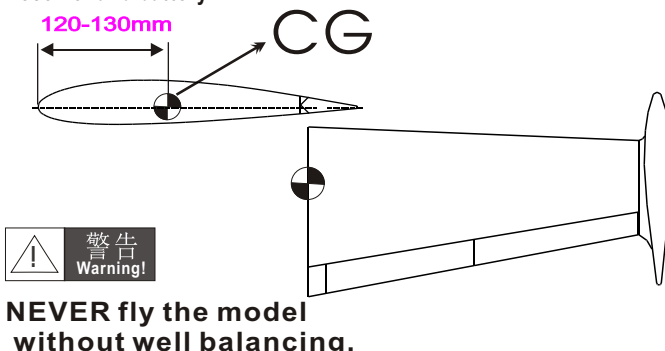

35 Spread a diagram